



Sensing Solutions since 1959


## Sensor Reference Information

# Float Sensor Mounting Types


### External Mounting (*float not shown*)

Arrow indicates mounting direction. Be sure that float can pass through tank opening


Pipe flange, external mount

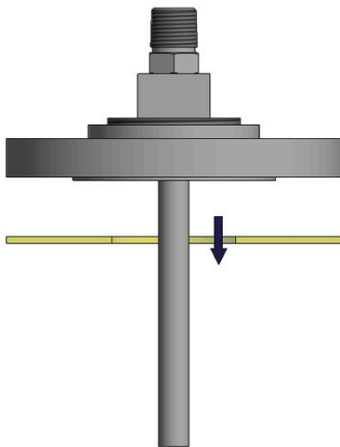


Pipe plug, external mount

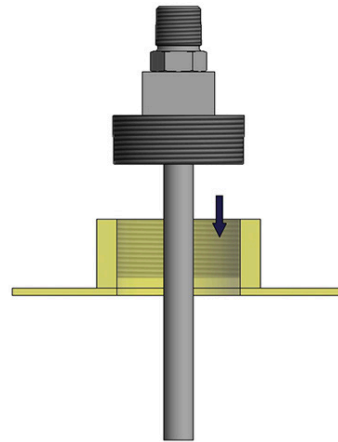

Sanitary fitting, external mount

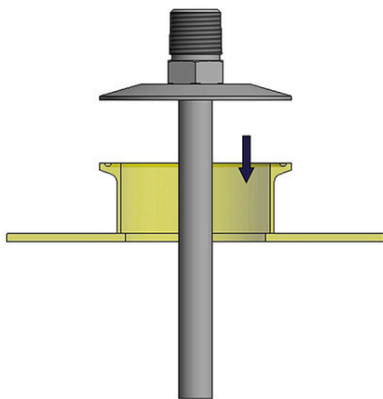

Pipe plug, adjustable, external mount

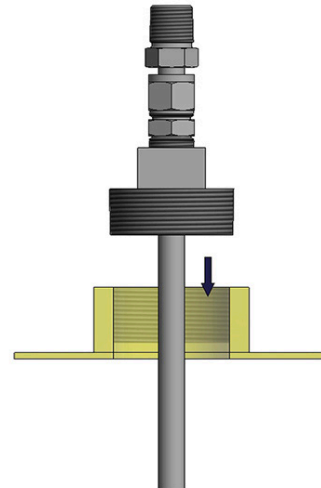



Sensing Solutions since 1959

## Sensor Reference Information

# Float Sensor Mounting Types

### Internal Mounting (float not shown)

Arrow indicates mounting direction.

